


Data Sheet | Item Number: 207-1372

Gelbox; conexiune în linie; pentru cabluri; cu gel; Seria 221; conectori de max. 4 mm²; fără conectori pentru cutia de joncțiune; Mărimea 1; gri

<https://www.wago.com/207-1372>



Color: ■ gri

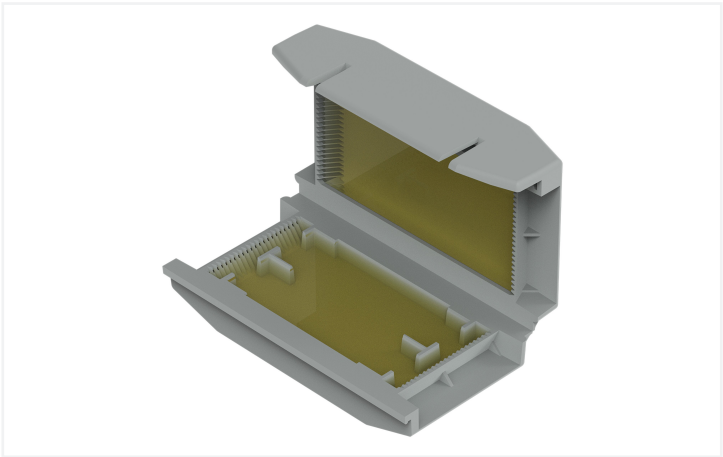

Note on Packaging Unit (PU) and Subpackaging Unit (SPU):
If you order a full PU, you will receive our eco-friendly, sustainable cardboard blisters packed in a shelf-ready box.
If you order a quantity smaller than a full PU, you will receive the eco-friendly, sustainable cardboard blisters without a shelf-ready box.

Please refer to the system description for the splicing connectors that can be used.

Your benefits:

- Easy, fast and safe to use
- Can be used immediately and accessed again later
- Silicon-free
- Label-free
- Suitable for indefinite storage
- The complete system consisting of WAGO's gelboxes and splicing connectors has been VDE-tested and IPX8-certified.

Connection data	
Connection 1	
Actuation type	Locking system



Physical data		
Width		32,7 mm / 1.26 inci
Height		17,8 mm / 0.669 inci
Depth		56,9 mm / 2.205 inci

Mechanical data		
Design		Size 1
Mounting type		Flying leads
Protection type		IPX8
Suitable		für Durchgangsverbinder 4 mm²

Material data		
Note (material data)		Information on material specifications can be found here
Color		gri
Housing material		Polypropylene
Fire load		0 MJ
Weight		19.8 g

Environmental requirements		
Ambient temperature (operation)		-55 ... +85 °C
Ambient temperature (storage)		0 ... +40 °C

Commercial data		
PU (SPU)		28 (4) Buc.
Country of origin		DE
GTIN		4066966349962
Customs tariff number		85389099990

Environmental Product Compliance		
RoHS Compliance Status		Compliant,No Exemption

Downloads		
Environmental Product Compliance		
Compliance Search		
Environmental Product Compliance 207-1372		

Documentation

System Description

System Description 207 Series Gel boxes	pdf 1156.45 KB	
System Description 207 Series Gel boxes	pdf 1191.37 KB	

Installation Notes



Lift the flap and pull the cover perforation forward.



Press in the perforation on the sides.



Tear off the cover from the perforation.



As a counter display: Bend the rear flap at the fold, straighten it and fix it in the cardboard cut-out



If the flap is not required, tear off from the perforation.